

# K19

## FITTING INSTRUCTIONS

Use with 401U/402U instructions  
Load carrier for cars without rain gutters




### KIT CONTENTS

Description	Qty
Outer clamp 113296	4

When fitting to these vehicles refer to the details below to determine the positioning of the bars on the vehicle roof.  
Refer to the manufacturers handbook to determine the vehicle's maximum roof load.  
Assemble and fit all other components as main product instructions describe.  
Once fitted regularly check that the bars are secure and firmly attached to your vehicle.  
Now read the 'Caution Notes' included in the 401U/402U instructions.

Vehicle Details	Fitting Dimensions	
	A	B
Daewoo Nubria - 4dr Saloon, 5dr Est	280mm	320mm
Daewoo Lanos - 4dr Saloon, 5dr Hatch	300mm	300mm
Daewoo Lanos - 3dr Hatch	560mm	140mm
Peugeot 106 - 5dr Hatch	440mm	260mm
Peugeot 407 - 4dr Saloon	300mm	350mm
Skoda Fabia - 5dr Hatch, 5dr Estate	200mm	570mm
Skoda Fabia - 4dr Saloon	250mm	500mm

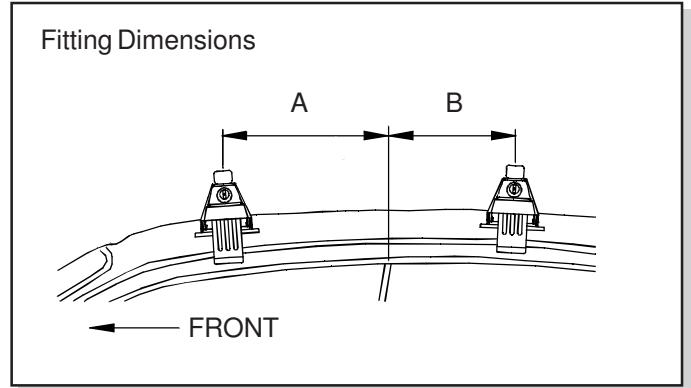

Note: All 3dr fitting dimensions are detailed in the 400X/NX fitting instructions.

NOTE :- The manufacturer operates a policy of continuous development, and reserves the right to alter specifications without prior notice. Therefore due to the possibility of improved design, contents may vary from those shown. In the event of parts missing from your kit, or fitting difficulties, telephone our help line on 01525 850800. Manufactured in the UK by Paddy Hopkirk Ltd, Eden Way, Pages Industrial Park, Leighton Buzzard, LU7 8TZ

PI265 Issue D

# K19

## FITTING INSTRUCTIONS

Use with 401U/402U instructions  
Load carrier for cars without rain gutters




### KIT CONTENTS

Description	Qty
Outer clamp 113296	4

When fitting to these vehicles refer to the details below to determine the positioning of the bars on the vehicle roof.  
Refer to the manufacturers handbook to determine the vehicle's maximum roof load.  
Assemble and fit all other components as main product instructions describe.  
Once fitted regularly check that the bars are secure and firmly attached to your vehicle.  
Now read the 'Caution Notes' included in the 401U/402U instructions.

Vehicle Details	Fitting Dimensions	
	A	B
Daewoo Nubria - 4dr Saloon, 5dr Est	280mm	320mm
Daewoo Lanos - 4dr Saloon, 5dr Hatch	300mm	300mm
Daewoo Lanos - 3dr Hatch	560mm	140mm
Peugeot 106 - 5dr Hatch	440mm	260mm
Peugeot 407 - 4dr Saloon	300mm	350mm
Skoda Fabia - 5dr Hatch, 5dr Estate	200mm	570mm
Skoda Fabia - 4dr Saloon	250mm	500mm

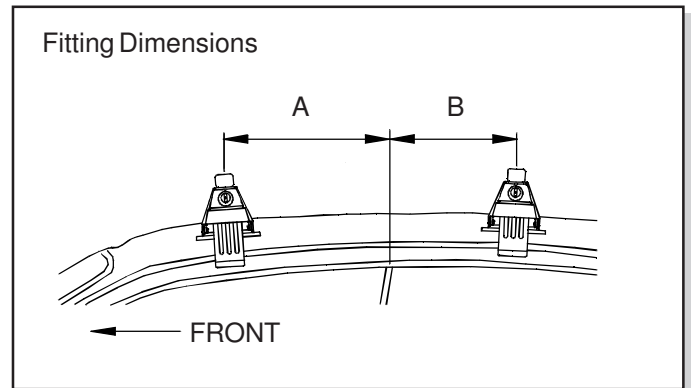

Note: All 3dr fitting dimensions are detailed in the 400X/NX fitting instructions.

NOTE :- The manufacturer operates a policy of continuous development, and reserves the right to alter specifications without prior notice. Therefore due to the possibility of improved design, contents may vary from those shown. In the event of parts missing from your kit, or fitting difficulties, telephone our help line on 01525 850800. Manufactured in the UK by Paddy Hopkirk Ltd, Eden Way, Pages Industrial Park, Leighton Buzzard, LU7 8TZ

PI265 Issue D