

## FITTING INSTRUCTIONS

Use with 401U/402U instructions  
Load carrier for cars without rain gutters



### KIT CONTENTS

Description	Qty	Models
Outer clamp 112438	2	3dr Only
Outer clamp 117196	2	All models
Outer clamp 117197	2	All models
Self adhesive pads	4	All models

The 3dr and 4dr/5dr models require different clamps to be fitted. Refer to the diagrams below to determine which of the numbered outer clamps must be fitted for your vehicle. (Diagrams 1 & 2)

When fitting to all the positions on 4dr & 5dr models and the front bar position on the 3dr model the self-adhesive pads must be fitted into the door apertures as shown (Diagram 3). Gently pull the door sealing rubber away from the vehicle bodywork to reveal two lugs. Remove the backing from the self-adhesive pad and position above the rear-most lug. Fit each clamps on the rear lug as shown. (Diagram 5)



When fitting the rear bar to the 3dr model select the correct clamps and position the clamp edge into the rear window opening in the position shown. (Diagram 4)

Refer to the manufacturers handbook to determine the vehicle's maximum roof load.

Assemble and fit all other components as main product instructions describe.

Once fitted regularly check that the bars are secure and firmly attached to your vehicle.

Now read the 'Caution Notes' included in the 401U/402U instructions.

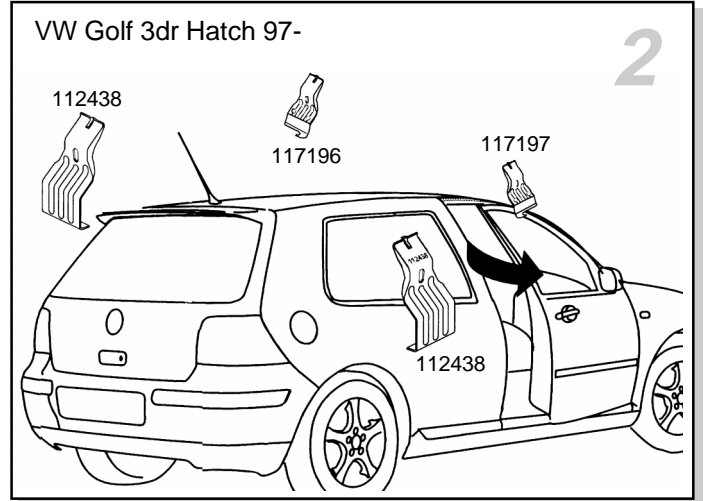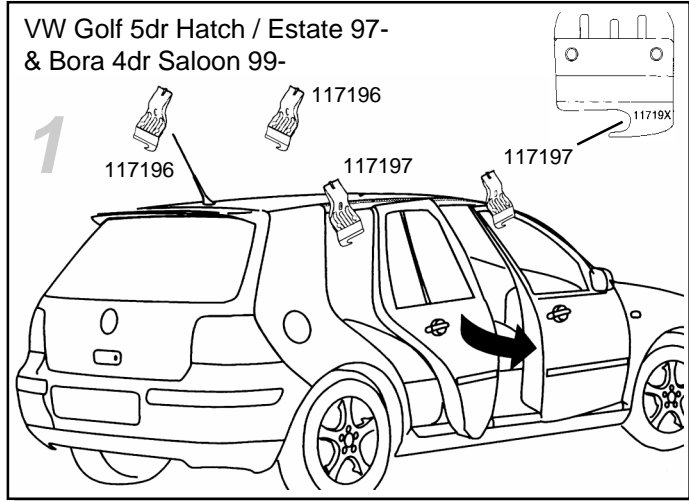

PI348 Issue A

NOTE :- The manufacturer operates a policy of continuous development, and reserves the right to alter specifications without notice. Therefore due to the possibility of improved design, contents may vary from those shown. In the event of parts missing from your kit, or fitting difficulties, telephone our help line on 01525 850800. Manufactured in the UK by Paddy Hopkirk Ltd, Eden Way, Pages Industrial Park, Leighton Buzzard, LU7 8TZ

